

ClearClick Video 2 Digital Converter User Guide



Notice: Extra instructions and other details are available in the manual provided with the device.

Function of Buttons

- **Power button:** Used to turn the device on and off
- **Menu button:** Used to access and back out of the Menu screen.
Note: The menu screen can only be accessed while in Recording or Picture mode.
- **Mode button:** Used to change between Recording, Picture, and Playback modes.
- **Record/Stop button:** Used to start and stop recording, as well as take pictures in Picture mode.
- **OK button:** Used to select menu items, as well as start and stop playback of recordings in Playback mode.
- **Up and Down arrow buttons:** Used to navigate up and down in the Menu screen, as well as adjust volume up and down.
- **Left and Right arrow buttons:** Used to navigate left and right, as well as fast forward and rewind in Playback mode.

Getting Started

1. **Power the Device:** Use the provided USB cable and power adapter to plug the ClearClick into a power outlet.

Note: The device should automatically turn on once it is connected to power. If it does not, press and hold the Power button for several seconds to turn it on.

2. Hook up a Video Source: Use the provided RCA/AV cable or an S-Video cable (not provided) to connect the ClearClick to a video source.

3. Changing the Video Source:

- a. Press the Menu button to access the Menu screen.
- b. Use the arrow buttons to navigate to the Video Source menu item, then press OK.

Note: You should see a Video Source menu pop-up on the screen.

- c. Select the video input option that you are using, then press OK.
- d. Press the Menu button again to exit the menu screen.

4. Plug in a Storage Device: Insert a USB flash drive or an SD card (Max. 128 GB) into the ClearClick.

5. Turning On or Off the Time Watermark:

Note: This function adds a watermark to recordings that displays the date and time of the recording.

- a. Press the Menu button to access the Menu screen.
- b. Navigate to the Time Watermark menu item, then press OK to turn the function on or off.
- c. Press the Menu button again to exit the menu screen.

Note: This function is off by default.

6. Setting the Date and Time:

Note: This option is only necessary if you choose to use the Time Watermark function.

- a. Press the Menu button to access the Menu screen.
- b. Navigate to the System Date/Time Setting menu item, then press OK.

Note: You should see a Date/Time Setting menu pop-up on the screen.

- c. Change the date and time using the arrow buttons.
- d. Press the OK button once you have set the minutes to confirm the date and time.
- e. Press the Menu button again to exit the menu screen.

Note: The date and time settings will reset to default when the device is powered off and unplugged.

7. Recording mode:

Note: The ClearClick defaults to recording mode when it is first powered on.

- a. Press the Record/Stop button to start recording on the ClearClick.

Note: If recording has started, you should see a counter appear to the right of the red camera symbol in the top left of the screen.

- b. Start playback of the video source.

Note: If the video source is functioning and connected properly, you should see a video image displayed on the ClearClick's screen.

- c. To pause recording, first pause playback of the video source (if possible), then press the OK button.
- d. To resume recording, start playback of the video source again, then press the OK button again.
- e. To stop recording, first stop playback of the video source, then press the Record/Stop button on the ClearClick.

Note: When recording is stopped, the video file will be saved and you will not be able to add to it.

8. Picture mode:

Note: Picture mode allows you to capture still images of a video source.

- a. Switch to Picture mode by pressing the Mode button either once (if in Recording mode) or twice (if in Playback mode).
- b. Start playback of the Video Source.
- c. Press the Record/Stop button when you want to create a picture of what is playing on the ClearClick's screen.

9. Playback mode:

Note: Playback mode allows you to view pictures or playback video files from the connected storage device that were created using the ClearClick.

- a. Switch to Playback mode by pressing the Mode button either once (if in Picture mode) or twice (if in Recording mode).
- b. Use the left and right arrow buttons to navigate between files.
- c. Press the OK button when you want to start playback of a video file.
- d. Use the Left and Right arrow buttons to fast forward and rewind.
- e. Use the Up and Down arrow buttons to adjust the volume.
- f. Press the OK button again to pause playback.
- g. Hold the OK button to stop playback.

Note: You must stop playback to switch between video files.