

# Hi8 / Digital 8 / 8mm Camcorder to Digital Instructions



**Notice:** The full manual for the camcorder can be found online at <https://www.sony.com/electronics/support/res/manuals/3079/30794671M.pdf>

## On the Camcorder

1. **Power the Camcorder:** Use the provided USB cable and power adapter to plug the camcorder into a power outlet (the port on the camcorder is located on the back right bottom marked DC IN). Move the power switch to VCR (you will push the green button to get the switch to move).



2. **Put tape in Camcorder:** Open tape compartment by sliding the OPEN/EJECT switch located on bottom of the camcorder and pull open compartment.
  - a. You will hear a ding and the metal compartment inside will **AUTOMATICALLY** pop out.
  - b. Place tape inside and shut metal top, but **DO NOT PUSH IN**. Compartment will automatically go down after shutting top.

3. **Open screen to view:** Push gray OPEN button and pull screen out.



4. **Plug in S-Video Cable:** Plug in S-Video cable (located in Box 10) in both camcorder and ClearClick device. See port location in photo below.

5. **Plug in Audio Cable:** Plug in audio cable (located in Box 10) to both camcorder and ClearClick device. See port location in photo below.



## On the ClearClick Device

1. **Power the Device:** Use the provided USB cable and power adapter to plug the ClearClick into a power outlet.
2. **Change the Video Source:**
  - a. Press the Menu button to access the Menu screen.
  - b. Use the arrow buttons to navigate to the Video Source menu item, then press OK.
  - c. From the video source menu, select S-Video.
  - d. Press the Menu button again to exit the menu screen.

3. **Plug in a Storage Device:** Insert a USB or a micro-SD card.

## Recording

**1) Press the Record button on the ClearClick.**

a) If recording has started, you should see a counter appear to the right of the red camera symbol in the top left of the screen.

**2) Press the Play button on the top of the camcorder.**

a. The recording is now in progress.  
 b. If the video source is functioning and connected properly, you should see a video image displayed on the ClearClick’s screen.

**3) When video source has finished playing or you want to stop it, first press Stop on the camcorder, then on the ClearClick.**

a. When recording is stopped, the video file is saved and you will not be able to add to it.  
 b. Remove your storage device from ClearClick.

*Note on cassette types:* This 350 model camcorder plays Digital 8, Hi-8, and Standard 8 mm cassettes per page 237 of online manual.

**350 351**

Usable cassette tapes	Hi8 Hi8/Digital8 (recommended)	Standard 8 mm *1)
Recording system	Digital8	
Playback system *2)	Digital8	
	Hi8 Hi8	Standard 8 mm

350, 351 camcorders	
Usable cassette tapes	Hi8/Digital8 (recommended)   Standard 8 mm
Recording system	Digital 8
Playback System	Digital 8   Hi8   Standard 8 mm

# Hi8 / Digital 8 / 8mm Viewing Instructions

1. **Power the Camcorder:** Use the provided USB cable and power adapter to plug the camcorder into a power outlet (the port on the camcorder is located on the back right bottom marked DC IN). Move the power switch to VCR (you will push the green button to get the switch to move).



2. **Put tape in Camcorder:** Open tape compartment by sliding the OPEN/EJECT switch located on bottom of the camcorder and pull open compartment.
  - a. You will hear a ding and the metal compartment inside will **AUTOMATICALLY** pop out.
  - b. Place tape inside and shut metal top, but **DO NOT PUSH IN**. Compartment will automatically go down after shutting top.
  - c. Close compartment.
3. **Press PLAY on top of device.**

*Note: There is no port for headphones.*