

Kodak Slide N Scan Digital Film Scanner



Please note: This is an abbreviated guide. More detailed instructions can be found in the User Manual.

This scanner will support:

Slides: 135, 110, & 126

Color Negative Film: 135, 110, & 126

Black & White Negative Film: 135, 110, & 126

YOU WILL NEED:

SD or SDHC card (maximum 32GB) *Note that SDXC cards are not compatible with this scanner. If an SD card is not compatible with the scanner, you will need to format it. WARNING: Formatting your SD card will erase everything on it. Please save elsewhere before formatting.*

PREPARE TO SCAN:

1. **Insert SD card** into the SC Card Slot at the back of the scanner—be sure the label on the card is face-up. The card will lock into place automatically.

2. **Press the Power Button** to turn on the scanner. The Home Page will appear on the LCD screen.
3. **Press the OK/Scan Button and choose the Film Setting icon** to set the size and type of film you are scanning.
4. **For all scans:** The 50 x 50 mm Hinged Slide Holder is used for all formats.
 - For **slides**: use the slide holder on its own.
 - For **film negatives**: use the slide holder with one of the three slide **adapters**.
 - Close the slide holder until it clicks shut. If it doesn't close properly, do not force it. Reposition the adapter and try again.

TO SCAN TRANSPARENT SLIDES:

1. **Insert the 50 x 50 mm Hinged Slide Holder** into the Film/Slide Holder Slot, using the triangular arrow marks on the holder and the scanner, until it stops.
2. **Insert slides one at a time** into the opening on the Slide Holder. The slides will push each other through. Manually center the slide by pushing to the left or right.
3. **Make color and brightness adjustments** as needed (see manual for further instructions).
4. **Scan the image** by pressing the OK/Scan button. Image will be saved to the SD card.

TO SCAN 135, 110 OR 126 NEGATIVES

1. **Open the 50 x 50 mm Slide Holder** and insert appropriate film adapter for the size of your negatives.
2. **Align all four pins** of the adapter and make sure it's fully inserted. Adapter should lie flat.
3. **Close the Slide Holder** until it clicks shut. If it doesn't close properly, do not force it. Reposition adapter and try again.
4. **Insert the Slide Holder** (with adapter) into the Film/Slide Holder Slot using the triangular arrow marks on the holder and the scanner, until it stops.
5. **Insert negatives one at a time** into the opening on the Slide Holder. Make sure the side of negative with the words printed on the edge is facing up and at the top of the holder. The negatives will push each

other through. Manually center the negative by pushing to the left or right.

6. **Scan the image** by pressing the OK/Scan button. Image will be saved to the SD card.

When finished scanning, be sure to remove and take your SD card.